

# TEAM8

AUDIBLE GPS + PERSONAL SPEAKER  
MANUAL / USER GUIDE

SERIAL # HERE

## WARRANTY / CONTACT

### **THE FOLLOWING ARE INCLUDED:**

- 30 DAY MONEY-BACK GUARANTEE
- 1-YEAR LIMITED WARRANTY  
(ONLINE REGISTRATION REQUIRED)
- ENROLLED AS A TECTECTEC! MEMBER
- RECEIVE EXCLUSIVE DISCOUNTS
- PRE-RELEASE INSIDER ACCESS TO NEW PRODUCTS

### **CONTACT:**

US@TECTECTEC.COM

(833)-383-2669

ALL SOCIAL....@TECTECTECUSA



THE **TEAM8**<sup>TM</sup> IS A PERSONAL, AUDIBLE, GPS DEVICE + SPEAKER. WE CREATED THIS PRODUCT WITH ONLY **YOU** IN MIND.

GOLF IS A SPORT OF ETIQUETTE AND FUN. HERE AT TECTECTEC!, OUR MAIN FOCUS IN THIS PRODUCT IS TO OFFER THE FIRST AND ONLY AUDIBLE GPS / SPEAKER DESIGNED FOR YOUR SINGULAR NEEDS ON THE COURSE. YES, THE **TEAM8** IS LOUD ENOUGH FOR OTHERS IN YOUR FOURSOME TO GET INTO THE GROOVE, BUT THIS LIGHT WEIGHT AND VERSATILE DEVICE KEEPS YOU IN CONTROL AND IN THE RIGHT MINDSET FOR OPTIMAL ON-COURSE JOY AND PERFORMANCE.

**TecTecTec!**  
ONLY WHAT YOU NEED

## PRODUCT DETAILS

POWER

VOLUME +



DISTANCE

VOLUME -

STRAP TETHER

CHARGE


USB-C

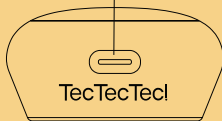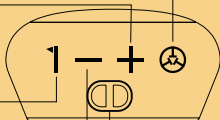

# PRODUCT DETAILS



MAGNET

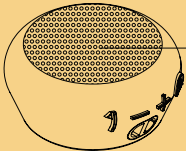

SPEAKER  
GUARD

## STEP 01 / APP

**DOWNLOAD**

ONLY NEED TO DO THIS ONCE

DOWNLOAD OUR **TECTECTEC! GOLF GPS APP**



USE THE CORRECT QR CODE ABOVE BASED ON THE COMPATIBILITY OF YOUR MOBILE DEVICE. ONCE DOWNLOADED, YOU WILL BE ABLE TO PAIR THE **TEAM8** WITH YOUR PHONE. NOW YOU'RE READY TO ENJOY.

## STEP 01 / APP

 
### SIGN UP

OPEN THE TECTECTEC! GOLF GPS APP AND CLICK ON THE BUTTON TO "SIGN UP".

FOLLOW THE INSTRUCTIONS PROVIDED ON THE SCREEN AND THEN CLICK ON THE BUTTON TO "SUBMIT".

THE "**DEVICE SERIAL NUMBER**" IS LOCATED ON THE FRONT OF THIS MANUAL.

STEP 02 / DEVICE



**TURN POWER ON**

HOLD UNTIL AUDIBLE CHIME AND BLUE POWER  
BUTTON ARE ILLUMINATED ON TOP OF DEVICE.

## STEP 03 / APP

### QUICK PLAY

PRESS QUICK PLAY TO START.



# TecTecTec!

## TEAM8

#12:34:56:78:D1:2D



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

## STEP 04 / APP

### PAIRING

FOLLOW PROMPT / PRESS NEXT

### PAIR YOUR DEVICE

---

1. ON YOUR SMARTPHONE, MAKE SURE YOU HAVE BLUETOOTH TURNED ON.
2. POWER ON YOUR SPEAKER.
3. SELECT **NEXT** BUTTON BELOW.

CANCEL

NEXT

## STEP 05 / APP

### AUTHORIZATION

**ALLOW** ACCESS TO FIND DEVICE.



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

ALLOW **TTECTECTEMOBILE** TO FIND, CONNECT  
TO AND DETERMINE THE RELATIVE POSITION  
OF NEARBY DEVICES?.

**ALLOW**

**DON'T ALLOW**

## STEP 05 / APP

### **AUTHORIZATION**

**ALLOW** ACCESS TO FIND DEVICE.

### **\*\*\* IMPORTANT \*\*\***

PLEASE FOLLOW THE PROMPTS AND CLICK  
THE CORRESPONDING OPTIONS HIGHLIGHTED.

ALLOW **TECTECTECMOBILE** TO ACCESS  
THIS DEVICE'S LOCATION?.

**PRECISE**

**WHILE USING THE APP**

### **ATTENTION**

THIS APP COLLECTS LOCATION DATA TO  
ENABLE DISTANCE READOUTS IN PLAY GOLF,  
EVEN WHEN THE APP IS CLOSED OR  
NOT IN USE.

**ALLOW ALL THE TIME**

## STEP 06 / APP

### SELECT GOLF COURSE

CHOOSE COURSE FROM NEARBY, RECENT OR SEARCH

← SELECT GOLF COURSE ☰

 🔍

NEARBY	RECENT
<b>AWESOME GOLF COURSE 1</b> SEATTLE, WA	1.8 MI
<b>AWESOME GOLF COURSE 2</b> SEATTLE, WA	3.5 MI
<b>AWESOME GOLF COURSE 3</b> SEATTLE, WA	7.1 MI
<b>AWESOME GOLF COURSE 4</b> SEATTLE, WA	8.4 MI
<b>AWESOME GOLF COURSE 5</b> SEATTLE, WA	10.5 MI
<b>AWESOME GOLF COURSE 6</b> SEATTLE, WA	13.2 MI
<b>AWESOME GOLF COURSE 7</b> SEATTLE, WA	15.7 MI
<b>AWESOME GOLF COURSE 8</b> SEATTLE, WA	15.9 MI
<b>AWESOME GOLF COURSE 9</b> SEATTLE, WA	18.0 MI

## STEP 07 / APP

### SELECT TEE BOX

CHOOSE TEE BOX FROM LIST BELOW



### SELECT TEE BOX

- |                                  |              |         |
|----------------------------------|--------------|---------|
| <input type="radio"/>            | <b>BLACK</b> | 419 YDS |
| <input checked="" type="radio"/> | <b>BLUE</b>  | 395 YDS |
| <input type="radio"/>            | <b>WHITE</b> | 375 YDS |
| <input type="radio"/>            | <b>RED</b>   | 305 YDS |

# IN PLAY / APP

## HOLE OVERVIEW

CLICK < HOLE > TO MOVE HOLES MANUALLY

## HOLE OVERVIEW

< HOLE 1 >

PAR 4 | LENGTH 413 | RANK 5

LAST SHOT DISTANCE --- YDS



DISTANCE TO HOLE

**396**

FRONT

**410**

MIDDLE

**424**

BACK

HAZARDS

← **397**

BUNKER

**283** →

BUNKER

**294** →

BUNKER

 
END GAME

SETTINGS

## DISTANCE

### \*\*\* IMPORTANT \*\*\*

GPS DISTANCE IS MEASURED FROM THE LOCATION OF THE PHONE, NOT FROM THE DEVICE.



**DISTANCE**

THE FLAG STICK CONTROLS THE FOLLOWING:


 
- **SINGLE PRESS** - MEASURES DISTANCE TO FRONT / MIDDLE / BACK OF GREEN.
- **HOLD SINGLE PRESS** - MEASURES DISTANCE FROM SHOT TO SHOT.
- **DOUBLE PRESS** - MEASURES DISTANCE TO CLOSEST HAZARD.

## CONNECTION RANGE

### DISTANCE FROM DEVICE TO PHONE

**TEAM8** MUST BE WITHIN 15 YDS TO HAVE CONSISTENT PAIRING WITH APP.

15 YDS

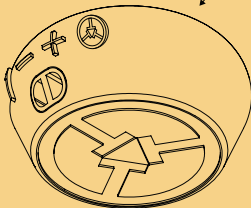

# MAGNETIC ECOSYSTEM

THE TEAM8 IS A PART OF THE TECTECTEC!

MAGNETIC ECOSYSTEM 

MAGNETIC SOLE  
ON **TEAM8**.



GOLF CART



GOLF CLUB

 


BAG CLIP



BELT CLIP

MUSIC




**VOLUME /**  
**SONG SELECTION**

THE - / + BUTTONS CONTROLS BOTH SPEAKER  
VOLUME AND SONG SELECTION:

- **SINGLE PRESS** - CONTROLS VOLUME
- **HOLD SINGLE PRESS** - CONTROLS SONG  
SELECTION

## PHONE

 **ANSWER /  
END CALL**




**VOLUME /  
ON CALL**

THE TECTECTEC BUTTON WILL ANSWER YOUR PHONE CALL. THE SPEAKER HAS A BUILT IN MICROPHONE SO YOU CAN CONTINUE YOUR HANDS-FREE ON-COURSE JOY.

- **SINGLE PRESS** - ANSWERS / ENDS CALL
- THE - / + SIGN CONTROL CALL VOLUME

## CHARGING

**CHARGE  
USB-C**

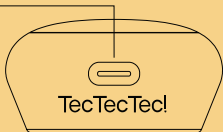

THE **TEAM8** COMES WITH A USB TO USB-C CABLE. PLUG CABLE INTO PORT ABOVE THE TECTECTEC! LOGO.

A SINGLE CHARGE LASTS 1-2 ROUNDS DEPENDING ON THE USAGE. PLEASE MAKE SURE YOUR PHONE IS FULLY CHARGED BEFORE PAIRING TEAM8.

GPS USES SUBSTANTIAL POWER.

## FAQ

### **FAQ:**

THE **TEAM8** IS A GPS DEVICE THAT REQUIRES A CONSTANT WIFI OR CELLULAR CONNECTION TO RETRIEVE INFORMATION FROM THE SERVER.

**- HOW DO I RESET MY DEVICE?** HOLD DOWN POWER BUTTON UNTIL UNIT POWERS OFF. WAIT 3-5 SECONDS AND THEN HOLD DOWN POWER BUTTON UNTIL UNIT POWERS ON. THIS WILL RETURN YOU TO THE MAIN MENU WHERE YOU CAN SCROLL THROUGH THE HOLE OVERVIEW TO THE APPROPRIATE HOLE.

**- DO I HAVE TO PAIR MY DEVICE MANUALLY EVERY TIME I OPEN THE APP?** NO, THE APP WILL RECOGNIZE THE DEVICE AND AUTO PAIR.

## SAFETY

### **FOR YOUR SAFETY AND FOR LONG ENJOYMENT OF OUR PRODUCT, PLEASE FOLLOW THE SAFETY INSTRUCTIONS:**

- PLEASE USE AS DESCRIBED IN THE MANUAL.
- TO PROTECT YOUR HEARING AND WIDEN THE LIFE SPAN OF THE SPEAKER, MAXIMUM VOLUME SHOULD NOT BE HELD DIRECTLY TO THE EAR.
- PLEASE KEEP THE POWER ADAPTER AND SPEAKER DRY AND USE THEM IN A DRY ENVIRONMENT ONLY.
- DO NOT TOUCH WITH WET HANDS.
- KEEP AWAY FROM DAMP, HIGH TEMPERATURE, DUSTY, EROSION AND OXIDATIVE ENVIRONMENTS.
- DO NOT DROP THE UNIT
- TURN OFF POWER WHEN DEVICE IS NOT IN USE.
- DO NOT OPEN OR DISASSEMBLE THE UNIT.


## FCC INTERFERENCE

**THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES.**

THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

### **RADIATION EXPOSURE STATEMENT:**

- THIS EQUIPMENT COMPLIES WITH FCC RADIATION EXPOSURE LIMITS SET FORTH FOR AN UNCONTROLLED ENVIRONMENT..
- THIS TRANSMITTER MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER.

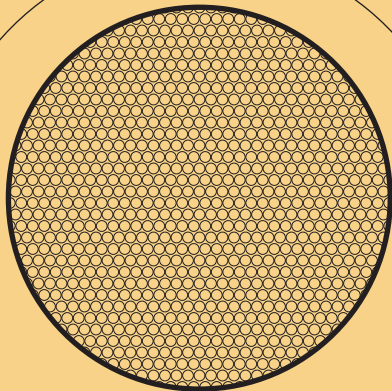

# TEAM8

AUDIBLE GPS + PERSONAL SPEAKER  
MANUAL / USER GUIDE

SERIAL # HERE

## WARRANTY / CONTACT

### **THE FOLLOWING ARE INCLUDED:**

- 30 DAY MONEY-BACK GUARANTEE
- 1-YEAR LIMITED WARRANTY  
(ONLINE REGISTRATION REQUIRED)
- ENROLLED AS A TECTECTEC! MEMBER
- RECEIVE EXCLUSIVE DISCOUNTS
- PRE-RELEASE INSIDER ACCESS TO NEW PRODUCTS

### **CONTACT:**

US@TECTECTEC.COM

(833)-383-2669

ALL SOCIAL....@TECTECTECUSA



THE **TEAM8**<sup>TM</sup> IS A PERSONAL, AUDIBLE, GPS DEVICE + SPEAKER. WE CREATED THIS PRODUCT WITH ONLY **YOU** IN MIND.

GOLF IS A SPORT OF ETIQUETTE AND FUN. HERE AT TECTECTEC!, OUR MAIN FOCUS IN THIS PRODUCT IS TO OFFER THE FIRST AND ONLY AUDIBLE GPS / SPEAKER DESIGNED FOR YOUR SINGULAR NEEDS ON THE COURSE. YES, THE **TEAM8** IS LOUD ENOUGH FOR OTHERS IN YOUR FOURSOME TO GET INTO THE GROOVE, BUT THIS LIGHT WEIGHT AND VERSATILE DEVICE KEEPS YOU IN CONTROL AND IN THE RIGHT MINDSET FOR OPTIMAL ON-COURSE JOY AND PERFORMANCE.

**TecTecTec!**  
ONLY WHAT YOU NEED

## PRODUCT DETAILS

POWER

VOLUME +


DISTANCE

VOLUME -


STRAP TETHER

CHARGE


USB-C

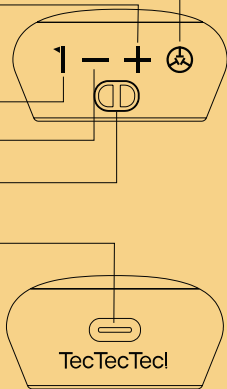

# PRODUCT DETAILS

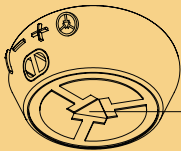

MAGNET

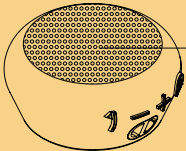

SPEAKER  
GUARD

## STEP 01 / APP

**DOWNLOAD**

ONLY NEED TO DO THIS ONCE

DOWNLOAD OUR **TECTECTEC! GOLF GPS APP**



USE THE CORRECT QR CODE ABOVE BASED ON THE COMPATIBILITY OF YOUR MOBILE DEVICE. ONCE DOWNLOADED, YOU WILL BE ABLE TO PAIR THE **TEAM8** WITH YOUR PHONE. NOW YOU'RE READY TO ENJOY.

## STEP 01 / APP

### SIGN UP


OPEN THE TECTECTEC! GOLF GPS APP AND CLICK ON THE BUTTON TO "SIGN UP".

FOLLOW THE INSTRUCTIONS PROVIDED ON THE SCREEN AND THEN CLICK ON THE BUTTON TO "SUBMIT".

THE "**DEVICE SERIAL NUMBER**" IS LOCATED ON THE FRONT OF THIS MANUAL.

## STEP 02 / DEVICE

### POWER ON

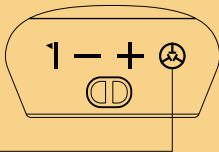

### **TURN POWER ON**

HOLD THE BUTTON UNTIL AUDIBLE CHIME AND BLUE POWER BUTTON ARE ILLUMINATED ON TOP OF DEVICE.

## STEP 03 / APP

**QUICK PLAY**

PRESS QUICK PLAY TO START.



**TecTecTec!**

**TEAM8**

#12:34:56:78:D1:2D



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

## STEP 04 / APP

### PAIRING

FOLLOW PROMPT / PRESS NEXT

### PAIR YOUR DEVICE

---

1. ON YOUR SMARTPHONE, MAKE SURE YOU HAVE BLUETOOTH TURNED ON.
2. POWER ON YOUR SPEAKER.
3. SELECT **NEXT** BUTTON BELOW.

CANCEL

**NEXT**

## STEP 05 / APP

### AUTHORIZATION

**ALLOW** ACCESS TO FIND DEVICE.



QUICK PLAY



SPEAKER  
SETTINGS



REMOVE  
DEVICE

ALLOW **TTECTECTEMOBILE** TO FIND, CONNECT  
TO AND DETERMINE THE RELATIVE POSITION  
OF NEARBY DEVICES?.

**ALLOW**

**DON'T ALLOW**

## STEP 05 / APP

### **AUTHORIZATION**

**ALLOW** ACCESS TO FIND DEVICE.

### **\*\*\* IMPORTANT \*\*\***

PLEASE FOLLOW THE PROMPTS AND CLICK  
THE CORRESPONDING OPTIONS HIGHLIGHTED.

ALLOW **TECTECTECMOBILE** TO ACCESS  
THIS DEVICE'S LOCATION?.

**PRECISE**

**WHILE USING THE APP**

### **ATTENTION**

THIS APP COLLECTS LOCATION DATA TO  
ENABLE DISTANCE READOUTS IN PLAY GOLF,  
EVEN WHEN THE APP IS CLOSED OR  
NOT IN USE.

**ALLOW ALL THE TIME**

## STEP 06 / APP

### SELECT GOLF COURSE

CHOOSE COURSE FROM NEARBY, RECENT OR SEARCH

#### ← SELECT GOLF COURSE ≡

SEARCH GOLF COURSES



NEARBY

RECENT

<b>AWESOME GOLF COURSE 1</b> SEATTLE, WA	1.8 MI
<b>AWESOME GOLF COURSE 2</b> SEATTLE, WA	3.5 MI
<b>AWESOME GOLF COURSE 3</b> SEATTLE, WA	7.1 MI
<b>AWESOME GOLF COURSE 4</b> SEATTLE, WA	8.4 MI
<b>AWESOME GOLF COURSE 5</b> SEATTLE, WA	10.5 MI
<b>AWESOME GOLF COURSE 6</b> SEATTLE, WA	13.2 MI
<b>AWESOME GOLF COURSE 7</b> SEATTLE, WA	15.7 MI
<b>AWESOME GOLF COURSE 8</b> SEATTLE, WA	15.9 MI
<b>AWESOME GOLF COURSE 9</b> SEATTLE, WA	18.0 MI

## STEP 07 / APP

### SELECT TEE BOX

CHOOSE TEE BOX FROM LIST BELOW



### SELECT TEE BOX

- |                                  |              |         |
|----------------------------------|--------------|---------|
| <input type="radio"/>            | <b>BLACK</b> | 419 YDS |
| <input checked="" type="radio"/> | <b>BLUE</b>  | 395 YDS |
| <input type="radio"/>            | <b>WHITE</b> | 375 YDS |
| <input type="radio"/>            | <b>RED</b>   | 305 YDS |

# IN PLAY / APP

## HOLE OVERVIEW

CLICK < HOLE > TO MOVE HOLES MANUALLY

## HOLE OVERVIEW

< HOLE 1 >

PAR 4 | LENGTH 413 | RANK 5

LAST SHOT DISTANCE --- YDS



DISTANCE TO HOLE

**396**

FRONT

**410**

MIDDLE

**424**

BACK

HAZARDS

← **397**

BUNKER

**283** →

BUNKER

**294** →

BUNKER

 
END GAME

SETTINGS

## DISTANCE

### \*\*\* IMPORTANT \*\*\*

GPS DISTANCE IS MEASURED FROM THE LOCATION OF THE PHONE, NOT FROM THE DEVICE.



**DISTANCE**

THE FLAG STICK CONTROLS THE FOLLOWING:


 
- **SINGLE PRESS** - MEASURES DISTANCE TO FRONT / MIDDLE / BACK OF GREEN.
- **HOLD SINGLE PRESS** - MEASURES DISTANCE FROM SHOT TO SHOT.
- **DOUBLE PRESS** - MEASURES DISTANCE TO CLOSEST HAZARD.

## CONNECTION RANGE

### DISTANCE FROM DEVICE TO PHONE

**TEAM8** MUST BE WITHIN 15 YDS TO HAVE CONSISTENT PAIRING WITH APP.

15 YDS

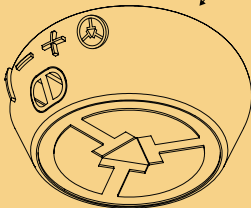

# MAGNETIC ECOSYSTEM

THE TEAM8 IS A PART OF THE TECTECTEC!

MAGNETIC ECOSYSTEM 

MAGNETIC SOLE  
ON **TEAM8**.



GOLF CART



GOLF CLUB

 


BAG CLIP



BELT CLIP

MUSIC




**VOLUME /**  
**SONG SELECTION**

THE - / + BUTTONS CONTROLS BOTH SPEAKER  
VOLUME AND SONG SELECTION:

- **SINGLE PRESS** - CONTROLS VOLUME
- **HOLD SINGLE PRESS** - CONTROLS SONG  
SELECTION

## PHONE

 **ANSWER /  
END CALL**




**VOLUME /  
ON CALL**

THE TECTECTEC BUTTON WILL ANSWER YOUR PHONE CALL. THE SPEAKER HAS A BUILT IN MICROPHONE SO YOU CAN CONTINUE YOUR HANDS-FREE ON-COURSE JOY.

- **SINGLE PRESS** - ANSWERS / ENDS CALL
- THE - / + SIGN CONTROL CALL VOLUME

## CHARGING

**CHARGE  
USB-C**

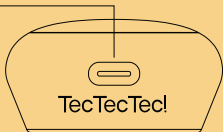

THE **TEAM8** COMES WITH A USB TO USB-C CABLE. PLUG CABLE INTO PORT ABOVE THE TECTECTEC! LOGO.

A SINGLE CHARGE LASTS 1-2 ROUNDS DEPENDING ON THE USAGE. PLEASE MAKE SURE YOUR PHONE IS FULLY CHARGED BEFORE PAIRING TEAM8.

GPS USES SUBSTANTIAL POWER.

## FAQ

### **FAQ:**

THE **TEAM8** IS A GPS DEVICE THAT REQUIRES A CONSTANT WIFI OR CELLULAR CONNECTION TO RETRIEVE INFORMATION FROM THE SERVER.

**- HOW DO I RESET MY DEVICE?** HOLD DOWN POWER BUTTON UNTIL UNIT POWERS OFF. WAIT 3-5 SECONDS AND THEN HOLD DOWN POWER BUTTON UNTIL UNIT POWERS ON. THIS WILL RETURN YOU TO THE MAIN MENU WHERE YOU CAN SCROLL THROUGH THE HOLE OVERVIEW TO THE APPROPRIATE HOLE.

**- DO I HAVE TO PAIR MY DEVICE MANUALLY EVERY TIME I OPEN THE APP?** NO, THE APP WILL RECOGNIZE THE DEVICE AND AUTO PAIR.

