

REGISTER TO ACTIVATE YOUR WARRANTY

Scan the QR Code or visit: https://tectectec.com/warranty





THANK YOU

for choosing **TecTecTec!**®
Any questions, suggestions, or concerns with this product, can be directed to: **cs@tectectec.com**

WHAT'S INCLUDED

- A) x 1 TecTecTec! BPROWILD 10 x 42 MM Binoculars
- B) x 1 Ocular Lens Caps
- C) x 1 Neck Strap
- D) x 1 Smartphone and Tripod Adapter
- E) x 2 42mm Objective Lens Caps
- F) x 1 Microfiber Cleaning Cloth/Pouch
- G) x 1 Carrying Case with Shoulder Strap and Belt Loop
- H) x 1 Box and Instruction Booklet

INSTRUCTIONS FOR OPTIMAL USE

- 1. Remove all rubber protection from the optics as pictured.
- 2. The ocular lenses (1) have two levels. Use the first level if you are wearing eyeglasses.
- Always aim your objectives in the direction of magnification before bringing them to your field of view.
- 4. Adjust the orientation of the center hinge manually to make it fit with your interocular morphology.
- With your naked eye, aim for an observation point, then bring the binoculars up to view that same point.
- 6. Adjust the ocular lenses (1) to level one or two as necessary.
- Close your right eye and open the left. Adjust the center adjustment dial (2) to focus the lenses on your target until you get a clear view.
- 8. Close your left eye and open the right. Continue the adjustment by rotating the diopter wheel (3) until you have a crystal clear view.
- 9. Adjust the magnification with the center dial depending on the distance to the target.
- 10. For prolonged use, consider connecting the neck strap to your binoculars to free your hands.
- 11. By unscrewing the cover (4) at the center you will have access to 1/4" thread where a tripod can be affixed.
- 12. Dry your binoculars quickly and completely after contact with a liquid without using compressed air.





REGISTER TO ACTIVATE YOUR WARRANTY

Scan the QR Code or visit: https://tectectec.com/warranty



PHOTOGRAPHING WITH A SMARTPHONE

- 1. Loosen the Y screw located on the right side of the adapter.
- 2. Loosen screw X located on the underside of the adapter.
- 3. Insert your phone halfway into the jaws of the adapter and tighten the Y screw.
- 4. Align the phone's camera lens with the hole in the cap and tighten screw X.
- 5. Click the adapter cap arround the left eyepiece.
- 6. Hold the assembly up as you rotate the adapter cap in order to tighten it around the eyepiece.
- 7. Check to be sure that the setup is solidly in place.
- 8. Adjust holding position in your hands according to your needs.
- 9. Activate the camera function of your smartphone.
- 10. Adjust the center dial of your binoculars in order to focus on your target.
- 11. The automatic zoom of the phone must be enabled. You will then be able to focus using on-screen controls.
- 12. Zoom in with your smartphone between 1.4x and 2x so that the border of the ocular lens is not seen.
- 13. Hold the set with both hands in order to take a photo.
- 14. Remember to set up your phone so that you'll have instant access to the camera from the lockscreen.



PREVENTIVE MAINTENANCE

- 1. Minimize exposure to dust, liquids, and chemicals.
- 2. Use a few drops of isopropyl alcohol applied first to a lint-free textile to clean your optics.
- 3. Stay alert and avoid placing your device on rough and / or dirty surfaces.
- 4. Do not use chemicals to clean the exterior of the binoculars.
- 5. Cover all lenses with their rubber protectors when the unit is not in use.
- 6. Protect your binoculars by placing them in the closed microfiber pouch before storing or transporting.
- 7. Keep the microfiber pouch containing your binoculars inside the carrying bag.
- 8. Be sure to use your binoculars within the ideal temperature range: 1 ° C to 40 ° C.